
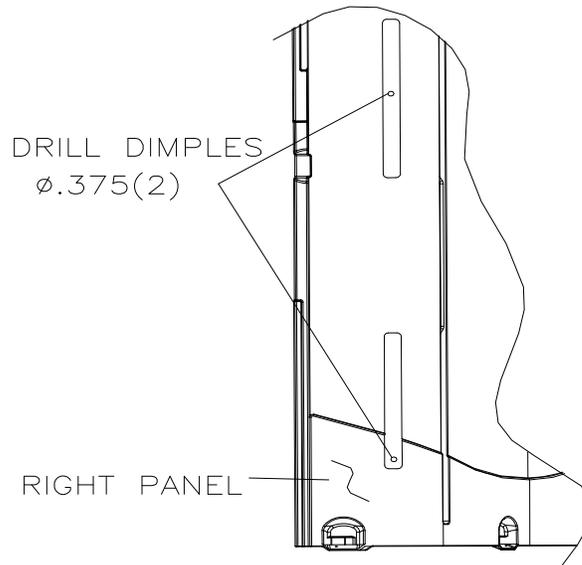


INSTRUCTIONS FOR MX3 HANDWASH INSTALLATION

INTRODUCTION: Follow these directions! Satellite portable restrooms and accessories must be assembled according to approved assembly procedures. Variations in assembly could adversely affect product life and warranty.

TOOLS: * Drill * 1-1/8 Hole Saw * Screw Driver (Phillips #2) * 3/8" Drill Bit

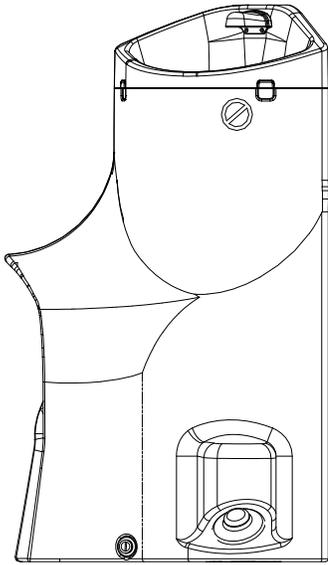

1. Drill (2) 3/8 holes at dimple locations through the right panel from the inside.
2. Remove the (4) screws securing tank to side and rear panels using the 3/8" nut driver bit.
3. Drill 1-1/8 hole in tank with hole saw at dimple for handwash drain hose. **See Fig #2.**
4. Place drain hose in (1-1/8) hole and slide handwash into place. Inserting flattened edge between tank and right panel.
5. Fasten handwash to panel as shown. (2) Places. **See Fig #3**

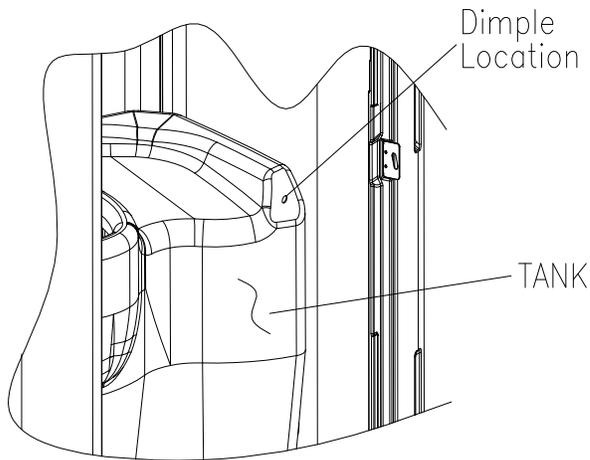


FIGURE #2

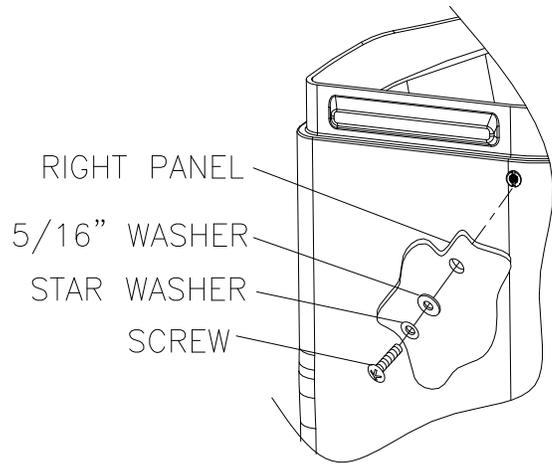


FIGURE #3

6. Re-install (4) screws removed in step 3.



2530 Xenium Lane North, Minneapolis, MN 55441
 Telephone: 763-553-1900 / Fax: 763-553-1905
 800-328-3332/ www.satelliteindustries.com